



DBP 01



instruction manual
használati utasítás
návod na použitie
manual de utilizare
uputstvo za upotrebu
navodilo za uporabo
návod k použití

bell push
for wireless doorbell
Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in the Hungarian language.
This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance by a person responsible for their safety and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children may only clean or perform user maintenance on the appliance under supervision.

Push the bell push you wish to register once, now the indoor unit emits sound and saves the unit to its memory.
If you wish to use more than one bell push, repeat the above sequence with the next unit (within 2 minutes). The maximum number of bell pushes that can be registered is determined by the receiver unit.
The device assumes 256 possible digital codes, from which it randomly chooses one, and this way guarantees that there will be no interference with similar bell push types in the vicinity.
If for any reason the unit needs to be reprogrammed, remove the battery from both units, wait for 15 seconds, and repeat the registration procedure. (At this time the appliance automatically generates another code for itself)
The appliance can be set up with 8 different melodies. With the black push button located beside the batteries of the outdoor unit the ringing melody can be changed. Every connected outdoor unit can have a different ringing melody.

A beltéri egység üzembe helyezése esetén (a fent említett módon) a készülék rövid hanglejtést ad, mely egyben azt is jelenti, hogy a beltéri egység kész fogadni a nyomógombot jelét.
Nyomja meg a regisztrálni kívánt nyomógombot egyszer, így a beltéri egység hanglejtést ad és rögzíti a memóriájában az egységet.

The wireless bell push can replace old damaged, malfunctioning remote switches, can be placed at new entrances, or can be used as a pager which also operates the doorbell beside old, or handicapped people.

For replacing lost, malfunctioning wireless bell pushes • pager function • changeable melodies • no interference with similar bell push types • operating frequency: 433,9 MHz • range in open spaces: 200 m • 256 different digital codes • 8 different melodies • power supply: 1 x CR 2032 [3 V] battery (included)

SETUP
After removing the transparent cover from the bottom of the bell push, push in the locking tab located on the bottom using a screwdriver, and remove the back cover.
Remove the plastic insulation sheet between the battery and the battery connector.
By pushing the push button located next to the battery the melody played can be chosen from 8 different melodies.
If you wish to install the bell push using screws, before putting back the back cover, brake trough the thinned parts recessed for the screws.
Placing the name plate: remove the transparent cover on the bottom of the bell push, by using a flat object on the recessed corners. Write the desired text on the insert plate, then put back the cover.
If the range shortens, replace the battery!
The bell push needs to be installed vertically, with the name plate on the bottom!
Weather resistant design, but when placing outdoors, it is advised to provide protection against the rain.

Vízleható üzemeléshez a nyomógombot csökkenítse, és a működést zavarhatják a falak és különösen a fém tárgyak (fém kerítés, ajtó, kapu...), valamint a rádiófrekvenciás berendezések (számítógép, mikrohullámú sütő, televízió...). Ne szereje a nyomógombot fém ajtókeretre, vagy más fém felület közeléből. Fagyott alatti hőmérséklet esetén az elem feszültsége és ezzel együtt a hatótávolság is csökken. • A központi egység csak beltéri használatra alkalmas • A különálló nyomógombot nem felhasználható, és ne tegye ki erős esőszínnek. • Ügyeljen arra, hogy a nyílásokon keresztül semmilyen tárgy vagy folyadék ne kerülhessen a készülékebe! • Soha ne próbálja meg szétszerelni a készüléket, javítását bárki elhárítja! • Legyen elővigyázatos, ne ejesse le a készüléket, Sérülés esetén lós tovább használni! • Az elemet minden gyermekkel elzártva tárolja! Ha valaki lenyelne az elemet, azonnal forduljon orvoshoz! • Az elemcserét csak felnőv végezheti el! • Ha az elemek körültek vagy hosszabb ideig nem használja a készüléket, azonnal távolítsa el az elemet! • Ha azokból esetleg kifolyt a folyadék, akkor vegyen fel védőszűrőt vagy rövidre lezárja a nyomógombot felületét. • A beltéri egység által általázo fedelét úgy, hogy a felső sarkainál lévő oldalról mélyedéséknél egy lapos tággyal lepártja. • R2 device: moderate reliability SRD telecommunication equipment, e.g. those which can cause to persons such inconveniences that cannot be solved easily with other devices. • This radio equipment adheres to the 1999/5/EU directives essential requirements. The current Declaration of Conformity is available from the somogyi@somogyi.hu e-mail address.

REGISTERING THE BELL PUSH, CHANGING THE RINGING MELODY
When installing the appliance make sure, to first ensure the power supply of the bell push (as mentioned above) and only after that the indoor unit.
When putting the indoor unit into operation (as above) the device emits two short beeps, which also means that the unit is ready to receive the signal of the bell push.

REGISTERING THE BELL PUSH, CHANGING THE RINGING MELODY
When installing the appliance make, to first ensure the power supply of the bell push (as mentioned above) and only after that the indoor unit.
When putting the indoor unit into operation (as above) the device emits two short beeps, which also means that the unit is ready to receive the signal of the bell push.

REGISTERING THE BELL PUSH, CHANGING THE RINGING MELODY
When installing the appliance make sure, to first ensure the power supply of the bell push (as mentioned above) and only after that the indoor unit.
When putting the indoor unit into operation (as above) the device emits two short beeps, which also means that the unit is ready to receive the signal of the bell push.

REGISTERING THE BELL PUSH, CHANGING THE RINGING MELODY
When installing the appliance make sure, to first ensure the power supply of the bell push (as mentioned above) and only after that the indoor unit.
When putting the indoor unit into operation (as above) the device emits two short beeps, which also means that the unit is ready to receive the signal of the bell push.

DBP 01



instruction manual
használati utasítás
návod na použitie
manual de utilizare
uputstvo za upotrebu
navodilo za uporabo
návod k použití

bell push
for wireless doorbell
Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in the Hungarian language.
This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance by a person responsible for their safety and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children may only clean or perform user maintenance on the appliance under supervision.

Push the bell push you wish to register once, now the indoor unit emits sound and saves the unit to its memory.
If you wish to use more than one bell push, repeat the above sequence with the next unit (within 2 minutes). The maximum number of bell pushes that can be registered is determined by the receiver unit.
The device assumes 256 possible digital codes, from which it randomly chooses one, and this way guarantees that there will be no interference with similar bell push types in the vicinity.
If for any reason the unit needs to be reprogrammed, remove the battery from both units, wait for 15 seconds, and repeat the registration procedure. (At this time the appliance automatically generates another code for itself)
The appliance can be set up with 8 different melodies. With the black push button located beside the batteries of the outdoor unit the ringing melody can be changed. Every connected outdoor unit can have a different ringing melody.

A beltéri egység üzembe helyezése esetén (a fent említett módon) a készülék rövid hanglejtést ad, mely egyben azt is jelenti, hogy a beltéri egység kész fogadni a nyomógombot jelét.
Nyomja meg a regisztrálni kívánt nyomógombot egyszer, így a beltéri egység hanglejtést ad és rögzíti a memóriájában az egységet.

instruction manual
használati utasítás
návod na použitie
manual de utilizare
uputstvo za upotrebu
navodilo za uporabo
návod k použití

bell push
for wireless doorbell
Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in the Hungarian language.
This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance by a person responsible for their safety and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children may only clean or perform user maintenance on the appliance under supervision.

Push the bell push you wish to register once, now the indoor unit emits sound and saves the unit to its memory.
If you wish to use more than one bell push, repeat the above sequence with the next unit (within 2 minutes). The maximum number of bell pushes that can be registered is determined by the receiver unit.
The device assumes 256 possible digital codes, from which it randomly chooses one, and this way guarantees that there will be no interference with similar bell push types in the vicinity.
If for any reason the unit needs to be reprogrammed, remove the battery from both units, wait for 15 seconds, and repeat the registration procedure. (At this time the appliance automatically generates another code for itself)
The appliance can be set up with 8 different melodies. With the black push button located beside the batteries of the outdoor unit the ringing melody can be changed. Every connected outdoor unit can have a different ringing melody.

A beltéri egység üzembe helyezése esetén (a fent említett módon) a készülék rövid hanglejtést ad, mely egyben azt is jelenti, hogy a beltéri egység kész fogadni a nyomógombot jelét.
Nyomja meg a regisztrálni kívánt nyomógombot egyszer, így a beltéri egység hanglejtést ad és rögzíti a memóriájában az egységet.

