



instruction manual

eredeti használati utasítás  
návod na použitie  
manual de utilizare  
uputstvo za upotrebu




**VB X900**

**S**<sup>®</sup>

SOMOGYI ELEKTRONIC<sup>®</sup>



H	EN	SK	RO	SRB-MNE
1.	mikrofon	microphone	mikrofón	mikrofon
2.	infra vevő	infrared receiver	infra prijímač	infra prijemník
3.	hullámsáv	waveband	vlnové pásma	bandă frecente
4.	léptetés	scrolling	krokovanie	pas
5.	be/kij/hangerő	on/off/volume	za/vypnúť/hlasitosť	pornit/opriť/volum
6.	léptetés	scrolling	krokovanie	pas
7.	fómenü/vissza	main menu/back	hlavné menu/späť	menu principal/napoi
8.	USB aljzat	USB socket	USB zásuvka	soclu USB
9.	microSD aljzat	microSD socket	microSD zásuvka	ležište za microSD
10.	visszállítás	restoration	späť	resetare
11.	AUX bemenet	AUX input	AUX vstup	intrare AUX

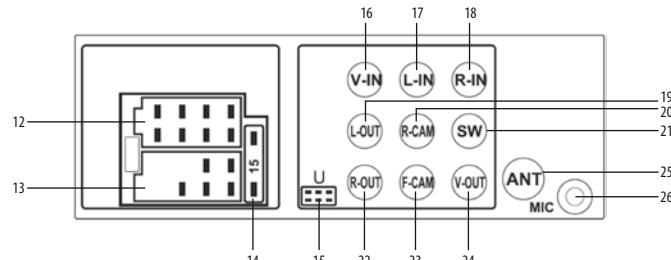

H	EN	SK	RO	SRB-MNE
12.	hangszórók	speakers	reproduktoři	zvučníci
13.	tápellátás	power supply	napajanie	napajanje
14.	15 A biztosíték	15 A fuse	15 A poistka	sigurantă 15A
15.	kiegészítők	accessories	prislušenstvo	accesorii
16.	video be	video on	video vstup	video ulez
17.	audio bal be	audio left on	audio levý vstup	levi audio ulaz
18.	audio jobb be	audio right on	audio pravý vstup	desni audio ulaz
19.	audio bal ki	audio left off	audio levý výstup	levi audio izlaz
20.	hátsó kamera be	rear camera on	zadná kamera vstup	ulaz, zadnja kamera
21.	mélysugárzó ki	subwoofer off	reproduktoř výstup	izlaz za niskotoniski zv.
22.	audio jobb ki	audio right off	audio pravý výstup	desni audio izlaz
23.	első kamera be	front camera on	predná kamera vstup	ulaz, prednja kamera
24.	monitor ki	monitor off	monitor výstup	izlaz za monitor
25.	DIN antenna	DIN antenna	DIN anténa	DIN antena
26.	különböző mikrofon	external microphone	externý mikrofón	spoljni mikrofon

## autórádió és multimédia lejátszó

A termék használata vétele előtt, kérjük, olvassa el az alábbi használati utasítást és örizze meg. Az eredeti felirat magyar nyelven készült. Ez a készüléket azok a személyek, aikrökökön fizikai érzékelési vagy szellemi képességekkel rendelkeznek, vagy aiknek a tapasztalata és a tudása hiányzik, továbbá gyermeket 8 éves kortól csak abban az esetben használhatják, ha az felügyelet mellett tartják, vagy a készülék használata vonatkozó utmátrat kapnak, és megtérítik a biztonságos használatról erőlt veszélyeket. Gyermeket nem játszhatnak a készülékkel. Gyermekek kizárolag felügyelet mellett végezhetik a készülék tisztítását vagy felhasználói karbantartását. Kicsomagolás után győződjön meg róla, hogy a készülék nem sérült meg a szállítás során. Tartsa távol a gyermekeket a csomagolástól, ha az zacskó vagy más vezélyt jelentő összetevőt tartalmaz!

### FÖRB JELLEMZŐK

#### iOS ÉS ANDROID KÉPERNYŐ TÜRKÖZÉS\*

MINDENT TELEFONOK ALKALMAZÁS AZ AUTÓRÁDIÓN LÁTHATÓ ÉS ONNAN VEZÉRELHETŐ\*\*

- 7,0" (18 cm) LCD erősítő-képernyő - 2 x DIN méretű készülék - változathangú színi RGB gomb háttérvilágítás - rádió/zene/foto/videó lejátszás - vezeték nélküli BT kapcsolat - 2in1: beépített és cíptetős külső mikrofon - telefon érinthető nélkül - telefonbeszélgetés kihangosítása - telefonkönyv és hívási lista a képernyón - USB/microSD eszköz csatlakoztatáshoz - 30 tárhelyes AM/FM rádió RDS funkciókkal - útinformációs adások vételre - fejlett, egyedi hangszabályosítás - 10 sávos grafikus hangsínszabályozó - első és hatszín kamerák bemenetei - automatikus tolatakok funkció (opcionális: SA 143) - hatszín monitor lehetsége az utasoknak - gyári kormány-távirányítónál vezérelhető - 5 nyelvű menü (EN/HU/SK/RO/SRB) - 4 x 50 W Hi-Fi hangszörökkel - 3,5 mm AUX bemenet hordozható készülékekhez - 2+1 x RCA erősítő + aktiv mélysúsgárt kimenet - 2+1 x RCA video bemenet és 1 x RCA video kimenet

\*iPhone 6/7-8 és Android 5.0 vagy újjebb Mirror Link képes telefonokhoz, USB adatkábelrel csatlakoztatva;

\*\*iPhone: tükrözés, Android: tükrözés és vezélezés a rádió képernyójéről

### ÜZEMBE HELYESZÉS

Ez a termék okostelefonokkal képes együttműködni. Ezért a kérés elkezítésekor feltételeztük, hogy a felhasználó birtokában van az okostelefon kezeléséhez kapcsolódó általános ismereteknek. E rádió beállítása és használata közül áll a telefonról és táblagépre használható.

### A készülék alaphelyzetbe állítása

Ha a készülék rendellenesen működik ( bele érve a kijelzőt is), szükséges a mikroprocesszor adatainak törlése és a készülék újra indítása. Ehhez nyomja meg a kiegynésetti íratápcsalóval a védőfóliát alatti **RESET** (10,0) gombot a készülék gyári állapotba törött visszaállításához. Mutatunk kikapcsolt, kapcsolja vissza (5.).

### Be- és kikapcsolás, némitás

Kapcsolja ki a készüléket a (5.) **VOLUME** rövid megnyomásával. A képernyő bekapcsol és a készülék az utoljára kiválasztott funkcióra vált.

- A készülékekben a kikapcsolást követően automatikusan az utoljára használt funkcióra kapsol, feltéve, hogy időközben nem távolították el a csatlakoztatott külüi eszközöt.
- Minél a jármű motorjának elindításakor feszültségükkel keletkezhetnek, a készülék csak akkor kapsolja be, ha már jár a motor. A motor leállítása előtt hajtsa végre. A kikapcsoláshoz tartha nyomva 3 másodpercig a (5.) **VOLUME** gombot.
- A (5.) **VOLUME** gomb rövid benyomásával a hangszórakat kapcsolhatja ki és vissza (MUTE).

### A hangerő, hangsín és képmínőség beállítása

Használja a **forgatogombot** a kívánt hangerő beállításához: **VOLUME 00 – 40**. Az ezzel egyidejűleg megjelenő képernyő felső sorában kiválaszthatja a beállítandó paramétert (hangerő, hangsín vagy képmínőség almenü). Érintse meg a kívánt gombot, majd az érintőképernyő gombjaival személyre szabhatja az audio és video beállításokat.



### HANGERÓ-SZABÁLYOZÁS

1. válassza ki a HANGERÓ menüt
2. mozgassa a csúszkát, az ujját rajta tartva
3. érintse meg a hangszörök ki és vissza kapcsolásához



### ELŐRE BEÁLLÍTOTT HANGZÁSOK

1. válassza ki a EQ menüt
2. érintse meg az egyik beállítást
3. a BEÁLLÍTÁSOK menüben egyedi hangzást hozhat létre



### FIZIOLOGIAI HANGSZÍNSZABÁLYOZÁS


1. válassza ki a LOUDNESS menüt
2. érintse meg a be- és kikapcsoláshoz



### FIZIOLOGIAI HANGSZÍNSZABÁLYOZÁS

1. válassza ki a LOUDNESS menüt
2. érintse meg a be- és kikapcsoláshoz

HANGSZÍNSZABÁLYOZÁS  
1. válassza ki a HANGSZÍN menüt  
2. mozgassa a csúszkát a magas hangok szabályozásához  
3. állítsa be a mély hangzást is

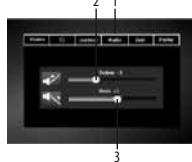


### TERHANGSÁZ BEÁLLÍTASA

1. válassza ki a TERHANGSÁZ menüt
2. mozgassa a csúszkát, hogy optimalizálja a hangzást a jármű egy adott üléséhez



### KÉPMINŐSZÉB BEÁLLÍTASA

1. válassza ki a KÉPERNYŐ menüt
2. egyesével válassza ki paramétereit
3. használja a csúszkákat igény szerint

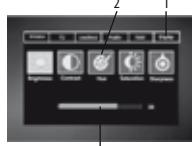

**VOLUME:** hangerő / **EQ:** hangszabályosítás; Standard, Classic, Rock, Pop, Jazz, Electric, Custom (egyéni beállítás) / **LOUDNESS:** fiziológiai hangsín beállítás / **AUDIO:** TREBLE-BASS (magas és mély hangsín) / **FIELD:** a hangszínről együttes hangerő-szabályozás (balance, fader) / **DISPLAY:** brightness, contrast, hue, saturation, sharpness (fényerő, képesség, színányalat, színtállítás, képlesesség)

### EZZEL A GYORGSGOMBBAL IS ELÉRHETI AZ AUDIO ÉS VIDEO BEÁLLÍTÁSOKAT

- A **SETUP** (beállítás) menü **AUDIO** almenüjében lehetőség van a gyári hangszínbeállítások módosítására az egyedi igények szerint egy 10 sávos grafikus hangsínszabályozó alkalmazásával.
- Nagyobb hangerőről hallgatóskor ne emelje ki jelentősen a mély és magas hangokat, mert az torzításhoz vezethet!
- Az **EQ** funkció törli a korábban beállított mély- és magas hangsín beállítást és fordítva.

### Fiziológiai hangsínszabályozás

Az emberek kisebb hangerőnél kevésbé érzékelik a mély és a magas frekvenciájú hangokat. A **LOUDNESS** funkció bekapcsolásával kisebb hangerőnél is elérhető a hatás korrigálja az automatikus hangsínszabályozás. Nagyobb hangerőnél javasolt kisebb hangerőnél tart, mert torzás állhat.

• A jobb hangminőség érdekében e funkció használata előtt javasolt az **EQ** kikapcsolása (**PLASTANDARD**) és a magas/mély hangsínszabályozás (**O**, pozícióba állításra).

• Minél nagyobb a hangerő, annál kevésbé érzékelhető az automatikus hangsínszabályozó hatása.

### Gyorsombok a kényelmes beállításhoz

Az éppen aktív üzemmódról függően a képernyő felső vagy alsó részében kilönböző gyorsombok jelennek meg a helyi menük gyorsabb elérése érdekében. Néhány kiemelt funkció:

1. A képernyő szimbólum kikapcsolja a képernyőt. Iggy elkerülhető annak zavaró fénye az éjszakai vezetésnél. A képernyőt általában megszünteti, amikor a csatlakoztatott eszközökkel.
2. Az előzőben résztvevő hang és képbeállítások menüje.
3. A vezeték nélküli BT kapcsolat funkciói; a párosított készülékek, telefonkönyv, hívási lista, tárcázás, zenelejátszás.
4. Lapozható fómenü a funkciók kiválasztásához.



### A VISSZA LÉPÉS GOMB MELLETTE A KÉPERNYŐ FÉNYERŐSZABÁLYOZÓ GYORSOMBJA

   **TÖBBSZÖRI GOMBONYMOSÁSSAL A FÉNYERŐ SZABÁLYOZHATÓ ÉS A KÉPERNYŐ KIKAPCSOLATHATÓ.**

A KIKAPCSOLT KÉPERNYŐT BÁR HOL MEGIRINTVE, AZ VISSZA KAPCSOL. AZ UTOLSÓ FUNKCIÓ A „BEÁLLÍTÁSOK” MENÜBEN EGYEDILEG BEÁLLÍTHATÓ FÉNYERŐ.

### Alapbeállítások, a kívánt nyelv kiválasztása

Nyomja meg az **M/N** (7,0) gombot vagy érintse meg a képernyőn a **HOME** (ház) fómenü gombot és lapozzon balra a menüben, hogy a **SETUP** (fogaskerek) beállítások gombot elérje. Az adott beállítás módosításához a kiválasztott sor jobb szélét érintse meg.

### FIZIOLOGIAI HANGSZÍNSZABÁLYOZÁS

1. válassza ki a LOUDNESS menüt
2. érintse meg a be- és kikapcsoláshoz









Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in the Hungarian language. This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children may only clean or perform user maintenance on the appliance after supervision. After unpacking the unit, confirm that it has not been damaged during transit. Keep the packaging away from children if it contains plastic bags or other potentially hazardous components!

#### MAIN CHARACTERISTICS

##### iOS AND ANDROID SCREEN MIRRORING\*

ALL TELEPHONE APPLICATIONS ARE VISIBILE ON THE CAR RADIO AND CAN BE CONTROLLED FROM IT\*\*

- 7,0" (18 cm) fix LCD touch screen - 2xDIN size devices - Changeable color RGB button backlighting - Radio/music/video/video playback - Wireless BT connection - 2in1: built-in and clip-on external microphone
- Calling without touching the phone - Hands-free phone conversation - Phonebook and call list on the screen - USB/microSD device can be connected - 30 storage spaces with AM/FM radio RDS functions
- Receiving travel information broadcasts - Advanced, unique sound settings - 10-band graphic equalizer
- Front and backside camera inputs - Automatic rear view camera function (option: SA 143) - Rear monitor option for the passengers - Can be controlled from factory steering wheel remote control - 5-language menu (EN/HU/SK/RO/SRB) - 4x50 W Hi-Fi speaker output • 3,5 mm AUX input for portable devices • 2+1xRCA amplifier+active subwoofer output • 2+1x RCA video input and 1xRCA video output

\*iPhone 6-7-8 and Android 5.0 or newer Link capable mobile phones, connected with USB data cable; after installing an application in case of Android

\*\*iPhone: mirroring, Android: mirroring and control from the radio's screen

#### INSTALLATION

This product is able to work with smart phones. Therefore, when preparing this description we assumed that the user is in possession of general knowledge related to the management of smartphones. Setting up and using this radio is very close to the use of phones and tablets.

#### Resetting the unit

If the device is malfunctioning (including its display), it is necessary to delete microprocessor data and to restart the device. To do this, press the **RESET** (10.) button under the protective cover with a straightened paper clip or reset the device. After it switched off, switch it back on (5.).

#### Switching on and off, mute

Turn on the unit by pressing the (5.) **VOLUME** button shortly. The display switches on and the unit switches to the last selected function.

- After on, it will automatically switch to the most recently used function after being switched on unless the external storage device has been removed in the meantime.
- Since starting the engine of a vehicle may cause voltage stoppages, only switch on the unit when the engine is running. Turn it off before turning off the engine. To switch off, press and hold the (5.) **VOLUME** button for 3 seconds.
- By pressing the (5.) **VOLUME** button shortly, you can switch off and back on the speakers (MUTE).

#### Volume, tone and image quality setting

Use the **rotary knob** to set the desired volume level: VOLUME 00 – 40. You can select the parameter (volume, tone or picture quality submenu) in the top row of the screen that appears simultaneously. Touch the desired button, and then touch the buttons on the touch screen to personalize the audio and video settings.

#### VOLUME-CONTROL

1. select the **VOLUME** menu
2. move the slider with your finger on it
3. tap the speaker for turn off and back sound



#### PRE-SET SOUNDING

1. select the **EQ** menu
2. tap one of the settings
3. in **SETTINGS** menu you can create unique sounding



#### PHYSIOLOGICAL TONE ADJUSTMENT

1. choose **LOUDNESS** menu
2. tap the switch for turning on/off



## car radio and multimedia player


#### TONE ADJUSTMENT

1. choose **TONE** menu
2. move the slider for regulating high-pitched volumes
3. set bass sound, too




#### STEREO SOUNDING SETTING

1. choose the **STEREO SOUNDING** menu
2. Move the slider to optimize the sound for a particular seat of the vehicle

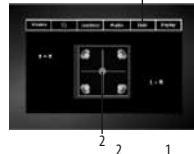

#### SETTING IMAGE QUALITY

1. choose the **SCREEN** menu
2. select each parameter individually
3. use the sliders as required

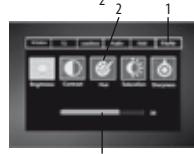

#### VOLUME: volume / EQ: sounding settings: Standard, Classic, Rock, Pop, Jazz, Electric, Custom (individual setting) / LOUDNESS: physiological tone on/off / AUDIO: TREBLE-BASS (high and low tone) / FIELD: the combined volume control of the 4 speakers (balance, fader) / DISPLAY: brightness, contrast, hue, saturation, sharpness

WITH THIS QUICK BUTTON YOU ALSO ACCESS AUDIO AND VIDEO SETTINGS

- In the **SETUP** menu's **AUDIO** submenu there is an opportunity to to adjust factory sound settings according to individual requirements using a 10-band graphic equalizer.
- When listening to music on higher volume, do not emphasize significantly high and low tones, as this may cause distortion!
- EQ function will cancel the previously set bass and treble equalizer tones.

#### Physiological tone adjustment

The human ear perceives less of low and high frequency sounds at smaller volume. By turning **LOUDNESS** function on, automatic tone adjustment will correct this effect at low volume. It is recommended to switch off this function, since it may cause distorted sound.

- In order to get better sound quality, before using this function it is recommended to choose EQ OFF setting (eg. STANDARD), and set the high/low equalizers to 0° position.
- The larger the volume, the less noticeable effect on the automatic tone correction.

#### Quick buttons for convenient setting

Depending on the active mode, various shortcuts appear in the upper or lower band of the screen to make the local menus access faster. Some key features:

1. The screen symbol turns the screen off. With this, you can avoid the annoying light at night driving. Tap anywhere on the screen to switch it back on.
2. The menu of the audio and picture settings detailed above.
3. The wireless BT connection functions; paired devices, phone book, call list, dialing, music playback.
4. Foldable main menu to select functions.



NEXT TO THE SCROLL BACK BUTTON THE BRIGHTNESS CONTROL'S QUICK BUTTON

BY REPEATEDLY PRESSING THE BUTTON, THE BRIGHTNESS IS ADJUSTABLE AND THE SCREEN CAN BE TURNED OFF. BY TAPPING THE TURNED OFF SCREEN ANYWHERE IT TURNS BACK ON. THE LAST FUNCTION IN "SETTINGS" MENU IS THE INDIVIDUALLY ADJUSTABLE BRIGHTNESS.

#### Basic settings, selection of the desired language

Press the **M/N** (7.) button or touch the **HOME** (house) main menu button and scroll left in the main menu, to reach the **SETUP** (gear) settings button. To modify the given setting, touch the right edge of the selected line.

1. exit to the main menu
  2. step back one level
  3. move the menu rows
  4. SYSTEM settings
  5. SOUND settings
  6. SCREEN settings
  7. MEDIA settings
  8. BT connection setting
- Step down to access additional menu items.



## Video playback on external monitor

An external video display can be connected to the device with the **V-OUT** yellow RCA socket on the backside. The monitor for rear passengers can be used. Narrator voice is audible through the speaker of the car or through an amplifier (option). • If black-white image is displayed on the external monitor, check its settings and the material's quality being played. • In case of noisy, poor picture quality, make sure the connection cable is correct!

## File manager – overview of available multimedia files

You can easily check and select the available files to be played from the currently active storage device. During playback of audio or video file, tap the first icon (list) in the bottom list to review the playlist. Playback starts by double-tapping the selected file.

## USING WIRELESS BT FUNCTIONS

The device can be paired with other equipment which is communicating by BT protocol, within maximum 10 meters operation range. After that, music which is played by mobile phone, tablet, notebook and other similar device is audible amplified. In case of incoming call, it is possible to answer call, make the call hands-free and cancel call, without touching the phone. The car radio can be connected with built-in microphone and 3 meter long wire (backsides MIC socket), it also has external microphone for telephone conversations. Lead the cable of the wired microphone hidden behind the plastic slats fixing the dashboard and the carpet, and place the microphone nearby your mouth, close to the awning or column "A". With this, your talking partner can hear you in even better sound quality. Make sure the windows are closed during call, as the trip noise significantly impedes the clarity of the speech.

Follwing extra functions are available: receive phone call, display the caller with number, starting a call with the touch screen's number buttons, call list (incoming, outgoing and missed calls), phonebook management, controlling your mobile phone's music player or listening to music on your mobile on-line.

The **BT** function can be accessed from the main menu, where you can get to with the **M/N** button or by touching the **HOME** (house icon). Look for the BT devices in the vicinity, including this car radio, as described in the operating instructions of the paired device. Connect the two devices together. If it requires password, enter: 0000 (can be changed in the "settings" menu). You can then hear a phone conversation or music from your phone's speakers. In case of the connection is successful, the type of the phone connected is immediately displayed on the screen. Buttons at the bottom of the screen:



- Dialer, start a call to any number; in the case of a dual SIM card phone, depending on the setting, you may be required to confirm the call on the phone. This can be avoided by adjusting the phone (depending on the type).

- Call list: the list of incoming, outgoing and unsuccessful calls can be updated with the fourth button in the first column; your phone may ask for permission from you (you can enable auto-update for re-connections on this device's "settings" menu).

- Phone book, contact list: if you have synchronized the phone as described above, the contact list is displayed.

- Wireless music playback: the music player application on your phone can be remotely controlled through the radio's touch screen.

- To view and remove the connected phone: touch the phone type and after that the appearing "X" to disconnect the phone.

Start playing with the music player of mobile phone or other similar device and music is audible through the car speakers. In case of incoming calls, you answer or cancel call with the help of the touch screen, while music playback is paused.

• One radio can be paired with one BT device at the same time. Actual operation range depends on the other device and environmental conditions (e.g. 5 m).

• Volume and sound quality of BT connection is affected by the audio settings of connected mobile phone.

• Occasionally, you may find that certain characters appear incorrectly or not at all. This is mainly affected on the special or accented characters and not the fault of the device.

## Display of rear view and front camera picture

In case of proper connection of the device, picture of connected rear view camera (optional: SA 143) will automatically appear on the screen, if the vehicle starts to reverse. Specified rear-view camera RCA socket (**R-CAM**) has to be used and **REAR CAMERA** wire (+12V) has to be connected to the reversing lamp. After the reversing has finished, the device will switch back to the previous position. As long as the **REAR CAMERA** wires are connected to +12 Volts, this video input will be active and only the image of external source connected to this socket will be visible on the screen. Other functions of the device cannot be operated during this time.

• You can also connect a front camera to the **F-CAM** RCA socket, which can be accessed from the main menu using the **F-CAM** icon. In the absence of video signal, the screen displays **NO SIGNAL**. You can return to the main menu by tapping the top left corner of the touch screen or by pressing the **M/N** button. If you use two cameras at the same time, you will automatically see the first camera's image on the monitor for 10 seconds when switching from reverse to forward. Without the first camera, disable its input in **SETTINGS/SYSTEM** menu.

## VIDEO-IN – Displaying the picture of the external source

Beside the two cameras, a third source can be connected as well to the device, e.g. TV tuner, DVD or multimedia player. Use the **V-IN** RCA socket located on the backside and the **R IN, L IN** RCA sockets for stereo sound input. To activate the function, select the **AUX / AV IN** option from the main menu.

## AUX IN – Stereo sound input

With the help of a stereo plug with 3.5 mm diameter, you can connect such external device to the **AUX** input, located on the front panel, which has earphone/audio output. You can listen to this portable device through the speakers of the car in high sound quality, if you select the **AUX / AV IN** input. Connectable devices with wire: e.g.: mobile phone, multimedia player, CD/DVD player, navigation...

• It is important to have proper settings of playback device to achieve high sound quality.

• Purchasing of external adapter may be needed to connect such devices which have audio output different from 3.5 mm diameter.

• For further information, check the instruction manual of device to be connected.

## Connecting external amplifier and active subwoofer

The rear **L OUT** and **R OUT** (white and red RCA socket) allow you to connect an external amplifier or active subwoofer with a low level input (LINE IN). The **SW OUT** RCA Jack is also available for connecting an active subwoofer. This output can be enabled from the "settings" menu. This gives you the opportunity to improve volume and sound quality.

## USB telephone charger mode

You can connect your mobile phone to the USB socket for charging purposes. The chargeable current is 5 V / 1.0 A.

• Please observe the parameters of the device to be charged and check the manufacturer's instructions in their instruction manuals. Do not use it for any other device that's manufacturer requires otherwise.

## DISPLAY MIRRORING – IOS MIRROR LINK

(for iPhone 6-7-8 series Mirror Link capable telephones)

The special feature of the device is that the image of mobile phones with iOS operating system connected to the USB cable can be displayed as a secondary display on the large touch screen. All applications on the mobile phone – depending on the position of the phone – are displayed in portrait or landscape format. For example, music, movies and other content on the phone's memory or from online sources, as well as internet radios, maps, navigation applications, PDI databases... You do not need to install an additional application on your phone, just enable data sharing as a secure connection after the first – USB cable – connection.

## In case of connection failure:

- Try another USB connection cable
- Restart your phone and check the data sharing permission
- Check, if your iOs phone is suitable for such use (6-7-8 series, with Mirror Link compatibility)
- If the image is not rotated by rotating the phone, then check that image rotation is enabled. You can also do this from the local control menu that appears after touching the white, unlabeled button on the left side of the car radio screen.
- The image and the sound are transferred to the car radio via the USB cable. Meanwhile, the phone's battery is charging. The USB cable should also has data transfer function in addition to the charging function. Usually the cable supplied with the mobile phone is appropriate.
- If the mirroring of a high resolution video recorded with a mobile phone stutters, choose a lower resolution or install another video player application.
- Due to the differences between mobile phones and their operating systems, there may be malfunctions and incompatibilities that are not caused by this device. Connections may be affected by third-party solutions, so its operation, development and changes are independent from the manufacturer of this product.
- The operation of screen mirroring and other functions as described herein may not be guaranteed in all cases, in case of reasons independent from the manufacturer.

## DISPLAY MIRRORING - ANDROID MIRROR LINK


(for iPhone 6-7-8 series Mirror Link capable telephones)

The special feature of the device is to display the image of a mobile phone which is connected with USB cable and which has Android operational system on the large touchscreen as a secondary display. All applications on your mobile phone are displayed in portrait or landscape format, depending on the position of the phone, and can be controlled from the radio's touch screen without touching the phone. For example, music, movies, and other content, as well as internet radio, maps, navigation applications, PDI databases, or music from the phone's memory or online.

First, make sure that you have a "QR Code" reader application on your phone. If you have not, install a free version from the Google Play app store.

Then select **PHONE LINK** from the main menu. Two QR codes and some instructions will appear on the screen.

Download the **AUTOLINK** application to install on your phone:

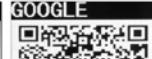

**AMAZON** QR code link; free download directly from the website to the phone:  
<https://s3.ap-southeast-1.amazonaws.com/productscenter/release/venus/bootes/common/Autolink.apk>  
[http://www.autolink.com.tw/ios800/jseosite/static/app/Autolink\\_basic.apk](http://www.autolink.com.tw/ios800/jseosite/static/app/Autolink_basic.apk)

**GOOGLE** QR code link; free download from Google Play store  
<https://play.google.com/store/apps/details?id=com.link.autolink>

As the third option, you can locate and install the **AUTOLINK** application with the logo above manually from the Google Play store.

- Download a file directly from the website to your phone and install the application independently of the store, such as the "AMAZON" link.

After installing the application, connect the phone with a USB data cable. Instructions on the screen:

CONNECT PHONE:

1. OPEN USB DEBUGGING


2. CONNECT USB LINE

Set the phone correctly:

- SETTINGS menu / DEVELOPER OPPORTUNITIES /

USB TROUBLESHOOTING/ USB CONNECTION: ON (enable!)

- Below the previous menu item: USB TROUBLESHOOTING RELEVANT PERMITS: ON (enable!)

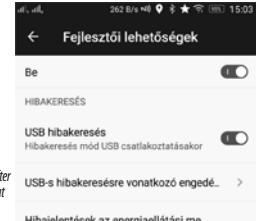

• This question usually automatically appears on the phone's opening screen or on its scrollable informational window after connecting the USB cable. Allow it to be permanently, so that it does not need to be repeated after each connection!

• It is recommended to have the screen lock switched off for easier operation or to set an unlocking mode on the phone, which is easier even from the car radio.

Android screen mirroring is only available if the **AUTOLINK** application is installed and the USB troubleshooting mode, as well as sharing data security setting is permitted on the phone. Unlock the screen lock on the phone and connect the phone's cable to the radio's USB socket. If the connection process does not happen automatically, touch the **CONNECT PHONE** (connect phone) button on the car radio screen. When a successful connection is made, the image of the mobile phone immediately appears on the screen.

## In case of connection failure:

- Verify that AUTOLINK is installed on your phone

- Try another USB connection cable

- Restart your phone and check developer, USB connection settings, and data sharing permissions

- Verify that your Android phone is suitable for such use (Android 5.0 and newer, with Mirror Link compatibility)

- If the image does not rotate when the phone is rotated, then check if the image-rotation is permitted in the scrollable menu. You can do this with local controller menu, which appears after tapping the white, unlabeled button on the car radio's left side.

- The picture is transmitted via the USB cable to the car radio while the sound is over the wireless BT connection. Meanwhile, the phone battery is charging.

- The USB cable must have a data transfer function in addition to the charging function. In general, the cable supplied with your phone is good.

- Due to the significant differences between mobile phones and their operating systems, there may be malfunctions and incompatibilities that are not caused by this device. The application which insures connection is a product of a third therefore its operation, development, and changes are independent from the manufacturer of this product.

- The screen mirroring and other functions described in this manual cannot be guaranteed in any case in existence of reasons independent of the manufacturer.

## Remote control functions

In order to use the remote control, please remove the insulating film extending from the battery compartment, if the product is equipped with one. If operation becomes unstable or the range decreases, please replace the battery with a new one: CR 2025; 3 V button cell.

- When using the remote control, aim it toward the unit's display from a maximum distance of 2 meters!
- In order to replace the battery, turn the remote control facing the buttons down then pull out the battery tray with the battery. Make sure the positive terminal of the inserted battery faces upward.
- WARNING! IMPROPER BATTERY REPLACEMENT CAN CAUSE RISK OF EXPLOSION! BATTERY MAY REPLACE WITH SAME OR REPLACING TYPE ONE! DO NOT EXPOSE THE BATTERY TO DIRECT HEAT AND SUNSHINE AND DO NOT THROW IT TO FIRE! IF THERE IS SOME LIQUID FLOWN OUT FROM THE BATTERY, TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY HOLDER WITH A DRY CLOTH! KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND CHARGE THE BATTERY! RISK OF EXPLOSION!
- THIS PRODUCT CONTAINS BUTTON CELL. BATTERIES MUST NOT BE SWALLOWED, RISK OF CHEMICAL BURN! IN CASE OF SWALLOWING, IT WILL CAUSE STRONG INTERNAL BURN AND CAN LEAD TO DEATH! KEEP THE USED AND BATTERIES OUT OF REACH OF CHILDREN! IF THE COVER OF THE BATTERY HOLDER CAN NOT CLOSE SAFELY, DO NOT USE THE PRODUCT AND KEEP OUT OF REACH OF CHILDREN. IF YOU THINK THE BATTERY HAS BEEN SWALLOWED OR GOT INTO ANY OF BODY PART, CONSULT A DOCTOR IMMEDIATELY!



	turn on- and off by keep pressed / press briefly for sound on and off
	play / pause
<b>MODE</b>	selection of signal source
<b>CLR / SYS</b>	calling number delete in case of BT calling
<b>SEL / PTV/GOTO</b>	selection / radio program type / step forward
	tuning / stepping / quick searching
	tuning / stepping / quick searching
	menu handling, stepping, setting, rotating, monitor movement
<b>ENT</b>	confirm operations
<b>BND/</b>	waveband / stop / end or reject call
	telephone-radio change / call receiving or starting it or calling back
<b>1 / OSD</b>	display information (video playback)
<b>2 / AUDIO</b>	audio channel (video playback)
<b>3 / ANGLE</b>	camera position option (video playback)
<b>4 / REP</b>	repeat modes (media playback)
<b>5 / RDM</b>	random order playback (media playback)
<b>6 / INT</b>	track presenter (media playback)
<b>7 / SUB-T</b>	FM local reception / subtitle (video playback)
<b>8 / TITLE</b>	FM stereo-mono / title of film (video playback)
<b>9 / ZOOM/</b>	tuning / magnification (video playback)
<b>0 / SETUP</b>	settings menu
	deceleration (video playback)
<b>CLK / AF - 10</b>	clock / alternative frequency / step back 10 programs
<b>AMS / TA + 10</b>	station searching / traffic information / step forward 10 tracks
<b># / MENU / PBC</b>	multimedia main menu (video playback)
<b>EQ / LOUD</b>	tone setting / bass emphasis
<b>VOL+</b>	increase volume
<b>VOL-</b>	decrease volume

#### Usage of car steering-wheel remote control

Car radio is ready for operation with the most common, factory built-in steering wheel remote controller. Radio can be controlled with steering wheel remote in such vehicles, where the control is based on function-assignment defined by specific resistance values, connecting to the negative potential through different resistors. Check the suitability of your vehicle at the distributor.

- If your vehicle is suitable, you can teach the functions you want to operate by going from button to button at the penultimate menu point of the SETTINGS menu.
- Touching the SWC steering-wheel remote control: tap one of the control buttons on the top screen, then hold pressed on the wheel the button, which you want to pair this function with. If it is successful, a message appears on the screen. Continue to touch the other buttons and confirm the settings with the confirming button at the end. If a problem occurs, contact a specialist.

#### File formats supported by your device

- Supported video subtitle files: TXT, SRT, SSA, SUB
- An "incorrect file" message will appear for unsupported or corrupted files.
- Playback even of supported files is not guaranteed in all cases as it may be affected by software and hardware conditions which are independent from the manufacturer.
- Ideally, although not normally required, displaying photos and videos that are compatible with the built-in screen resolution (no higher resolution) is recommended. Occasionally conversion may be required for smooth playback.
- Opening or storing unreasonably high resolution photo and video files on the connected media is not recommended. Also, do not store any type of file that this unit cannot handle!
- There may be differences in volume between different audio and video files due to their different parameters.

#### To know about TFT LCD screen

- Do not press, just touch the icons on the screen carefully, while it is in use!
- Protect form extreme temperature changes, shock, moisture!
- Do not clean with chemicals!

#### WARNINGS

- Before starting to use the player, read these instructions carefully, then keep them in an accessible place for future reference. • Seek professional assistance if necessary to prevent damaging the unit or motor vehicle! • The operation of the device may be affected by software and hardware that are independent from the manufacturer. • Occasionally, some characters may not be displayed properly or at all. This can mainly affect special or accented characters and is not the fault of the device. • The BT range for this product is about 5-10 meters in free space. Under other conditions this information may change. • Depending on the compressed files, the MP3 compression program used, and the quality of the USB/SD memory, anomalies may occur during playback, which are not due to the unit malfunctioning. • The playback of copy righted DRM files is not guaranteed! • It is also possible to connect MP3/MP4/MP5 players using a USB cable but avoid connecting external hard drives this way! • Do not store any additional files on the USB/microSD device other than playable files, because they can slow down or interfere playback. • Do not store data storage in the vehicle if it is exposed to freezing or extremely high temperatures! • While underway, do not do anything that distracts your attention from driving. Handling the player while driving can result in accidents. Spend minimum time watching the display! • Do not listen to the player too loud. Set a volume that allows you to hear external sounds while driving. Extreme volumes can also cause permanent damage to your ears! • Do not disassemble or remove the player, as that can cause fire, accidents, or electric shock. Incorrect use or installation renders the warranty void. • Only use cars with a 12 V battery and a negative ground. Using the player for any other purpose can result in electric shock, damage, or fire. The player was designed exclusively for use in vehicles! • Always use melting fuses with the proper values. When replacing a fuse, make sure that the new fuse has the same

nominal value as the one you are replacing. Using a different fuse can cause fire or damage (15 Ampere). • Do not block the player's cooling vents, as that can cause its circuits to overheat, resulting in fire. Install the player properly to ensure adequate ventilation. The air vents around the device must be left free. • Ensure that warm air from the ventilation system of the car is not directed to the opened side of the screen! • Prior to wiring/installation, be sure to remove the car battery's negative terminal connection! This will prevent any electric shock, short circuit or malfunction. • While installing the player never cut through cables or damage their insulation. Doing so can result in short circuit and fire! • Before drilling holes or inserting screws into your vehicle's body make sure you do not damage tubes or electric wires on the other side of the cover... • Do not connect to any electric systems of your vehicle that operate steering, brakes, or any other safety function. Doing so can result in loss of control over the vehicle, and can cause fire. • Do not install the player or its accessories in a location where they can prevent you from controlling the vehicle safely, e.g., nearby the steering-wheel and the gear shift. • Make sure that wires do not coil around neighboring objects. Arrange cables and wires in a way that does not hinder you in driving. Wires that interfere with your movement or hang over the gear shift, the brake etc. can be extremely dangerous. • In case of any malfunction, turn off the player immediately, and consult your distributor. Many malfunctions are very easy to detect (e.g., no sound, bad smell, smoke, an external object inside the product etc.). • Make sure that no external objects get into the USB socket or the memory card slot, as these can cause fatal damage. • Protect it from dust, damp, liquids, heat, moisture, frost and impact, as well as direct heat or sunlight! • When leading the connection cables make sure that their insulation does not get damaged by any sharp metal objects nearby! • Do not connect any cables when the device is working. Never turn on the system with the volume at the maximum level! Cracking or other noise impact occurring that can immediately damage the speakers irreversibly. • The warranty is not applicable to damage caused by irresponsible or improper installation or use! • A Somogyi Elektronik Kft. certifies that this radio equipment conforms to directive No. 2014/53/EU. Full text of EU Declaration of Conformity is available on the following address: somogyi@somogyi.hu • Due to continuous improvements, the technical data and design may change without any prior notice. • We don't take the responsibility for printing errors which may occur, and apologize for them.

#### PRECAUTIONS

##### Cleaning

Use a soft, dry cloth and a brush for regular cleaning. To remove stronger stains, wet the cloth slightly with water. Avoid scratching the display's surface; never wipe the display when it is dry, and do not use a rough cloth to clean the display. Even during gentle wiping, support the screen from the backside! Do not use detergents! Make sure no liquid gets inside the product or onto the connectors!

##### Temperature

Before turning on the player make sure that the temperature inside the car is between 0°C and +40°C, as the product is only guaranteed to operate properly within this temperature range. Extreme weather conditions can damage the product.

##### Location and installation

When installing the product, make sure it will not be exposed to any of the followings:

- direct sunlight or heat (e.g. from the heating system), - moisture, high humidity, - a significant amount of dust, - strong vibration

**Warning!** Manufacturer doesn't take responsibility for lost or damaged data, even if these data, etc. have been lost during the use of this product. It is recommended to make a safety copy about the data, tracks—located on the data storage—to your computer.

##### Proper handling of USB/SD memory unit

###### To avoid malfunction and errors, please observe the following:

- Carefully read the instructions of the USB/SD storage device or media player. • Do not tap the connectors with your hands or any object; keep the connectors clean. • Protect the USB/SD device from strong shocks. • Do not bend, drop, disassemble or modify these devices, and protect them from wet!

###### Do not use or store the device in the following locations:

- Anywhere inside the vehicle where it is exposed to direct sunlight or high temperature. • Any place with a high humidity or where corrosive materials are present. • Place the device in a location where it does not hinder you by driving.

###### Further important notes:

- USB/microSD memory devices may not function properly at extremely high or low temperatures. - Only use high-quality USB/microSD devices. Depending on their type and condition, even such high-quality products may not always work properly. The proper operation of these devices is not always guaranteed. - Depending on the type and condition of the USB/microSD device and the settings used in the software that encoded the MP3 files, the player may not detect or play back certain files. - Playing of copy-protected (copyrighted) files is not guaranteed. - The USB/microSD memory device may need a certain amount of time before playback can start. If the device also includes non-audio files, the time needed for playback to start may be significant.

- Do not remove the USB/microSD device while playback is in progress. Switch to signal source different from USB/microSD, and then remove the USB/microSD unit, in order to protect it from potential damage. - If you connect a portable audio player instead of a USB/microSD memory through the USB port, and the device has an MSC/MTP setting, choose the MTP option.

##### INSTALLATION (Only a specialist can install the device)

- Depending on the vehicle's design, additional metal straps or other means of fastening may be required. The manner of installation may differ from the instructions depending on the vehicle model!
- Connect the unit's wiring according to the instructions. Inspect the connectors in the vehicle for suitability according to the wiring instructions in this manual. Make sure that the connections are properly made and free of short circuits. The speaker wiring should be conducted properly!

• It is prohibited to connect any of the speaker wires to the vehicle's batteries negative terminal/grounding point! (e.g. black power cable or metal part on the vehicle).

• It is forbidden to connect any of the right and left channel's speaker wires.

###### In order to protect audio system from external noises:

- Locate the device and lead the cables at least 10 cm far from the car dashboard cables.
- Keep the battery power cables as far from any others as you can.
- Grounding cable should be connected securely to a clean surface of the car chassis, free from paint, dirt and grease.
- In case of connecting noise resistor, place it as far as possible from the unit, in case of noise reduction connection.

##### Speaker connections / faulty connection

In some cases, increasing the volume will not proportionally increase the bass level. This is dependent on the number of speakers used and their positioning, moreover, a speaker in the vehicle might also be wired out of phase.

###### 1. When two front speakers are used:

• Reverse the +/- polarity of either the right or left front speaker (the wires leading to either speaker should be reversed anywhere between the head unit and the speaker).

###### 2. When four speakers are used:

• A, if both the front and rear speakers are built into the doors (or otherwise isolated from each other, such as in a sound box), then the polarity of either speaker in both the front and rear should be reversed.

• B, if the front speakers are built into the doors but the rear speakers are built into the hat rack panel, then only the polarity of either front speaker should be reversed. The rear speakers' wires should remain unaltered.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Waste equipment must be collected and disposed separately from household waste because it may contain components hazardous to the environment or health. Used or waste equipment may be dropped off free of charge at the point of sale, or at any distributor which sells equipment of identical nature and function. Dispose of the product at a facility specializing in the collection of electronic waste. By doing so, you will protect the environment as well as the health of others and yourself. If you have any questions, contact the local waste management organization. We shall undertake the tasks pertaining to the manufacturer as prescribed in the relevant regulations and shall bear any associated costs arising.

## autorádio a multimediálny prehrávač

Pred použitím výrobku si pozorne prečítajte tento návod na použitie a starostlivo si ho uchovajte. Tento návod je preklad originálneho návodu.

Spoľahlivosť je určená na používanie osobami so značnými fyzickými, zmyslovými alebo mentálnymi schopnosťami, alebo s nedostatočnou skúsenosťou a vedomosťou, vrátane detí od 8 rokov, používaním spotrebicá o pociah nebezpečnosti pri používaní výrobku. Deti by mali byť pod dohľadom, aby sa so spotrebicom nehráli. Čtenie alebo údržbu výrobku môžu vykonať deti len pod dohľadom.

Po počítaní výrobku skontrolujte, či sa výrobok počas prepravy nepoškodil. Nedávajte detom balenie výrobku, keď obsahuje súčiak alebo iný nebezpečný komponent!

### HĽADANIE ĽOHKÝCH ALEBO VÝBORNÝCH

#### ZRKADLENIE IOS A ANDROID OBRAZOVKY /

#### VŠETKY APLIKÁCIE FONU SÚ ZOBRAZENÉ A OVLÁDATELNÉ NA AUTORÁDII \*\*

- 7,0" (18 cm) fixný LCD dotykový displej - 2 x DIN rozmer - RGB podsvietenie tlačidiel, možnosť zmeniť farbu - Prehrávanie rádia/hudby/obrazu/videa - Bezdrôtové BT spojenie - 2in1: integrovaný a stípkový externý mikrofón - Telefonovanie bez dotyku mobilného telefónu - Hlasitos odposluhu telefónového hovoru - Zobrazenie telefónneho zoznamu a zoznamu volaní na displeji - Pripojiteľné jednotky USB/microSD - Pamäť na 30 AM/FM stanice RDS funkciu - Príjem dopravných informácií - Individuálne nastavenie hlasitosti - 10 pásmový grafický regulátor hlasitosti - Predná a zadný vstup pre kamery - Automatická funkcia cievacej kamery (opcia: SA 143) - Možnosť pripojenia dvoch monitorov pre cestujúcich - Dúalkam obdivávanie z volantu - 5 jazyčné menu (EN/HU/SK/RO/SRB)
- 4 x 50 W Hi-Fi výstup na reproduktory - 3,5 mm AUX vstup pre prenosné zariadenia - 2+1 x RCA výstup pre posúšňovač + aktívny basový reproduktor - 2+1 x RCA video vstup a 1 x RCA video výstup
- \* pre iPhone 6-7 a Android 5.0 alebo novú verziu telefónu s podporou Mirror Link, s prepojením pomocou USB dátového kabla; v prípade Androidu treba stažiť jednu aplikáciu
- \*iPhone je zrkadlenie, Android: zrkadlenie a výdanie na displeji autorádia

#### UVIEDENIE DO PREVÁDKY

Tento výrobok môže byť používaný so smartfónom. Preto pri zhotovení tohto návodu sme predpokladali, že používate má všeobecné znalosti o používaní smartfónov. Nastavenie a používanie tohto rádia je veľmi podobné používaniu mobilných telefónov a tabletov.

#### Nastavenie prístroja do výhodiskového stavu


V prípade občerstveného správania sa prístroj (vrátane jeho displeja) treba vymazat dátá mikroprocesora. K tomu tentým hotrom stlačte tlačidlo **RESET** (10) pod ochranným krytom. Po vypnutí, zapnite znova (5).

#### Zapnutie a vypnutie, stísenie prístroja

- Priamo zapnite tlačidlo **(5) VOLUME**. displej sa zapne a prístroj sa prepne do posledného použitého režimu.  
 • Neskor, po zapnutí prístroja sa automaticky prepne do posledného použitého režimu, za predpokladu, že medzičasné externé záriadenie nebolo odstránené.  
 • Pri startovaní motorového vozidla vzniknú napájacie impulzy, preto prijímať zapnite až pri bežaní motora. Prijímať vypnite ešte pred odštartovaním motora. Prístroj vypne 3 sekundovým stlačením tlačidla **(5) VOLUME**.  
 • Krátkym stlačením tlačidla **(5) VOLUME** a vypnete reproduktory **(MUTE)**.

#### Nastavenie hlasitosti, ekvalizára a kvality obrazu

Požadovanú hlasitos nastavte **otvorením gombíkom: VOLUME 00 - 40**. Na hornej časti displeja môžete vybrať nastaviteľný parameter (hlasitos, equalizér alebo podmenu kvality obrazu). Dotknite sa želaného tlačidla, potom pomocou tlačidiel dotskového displeja môžete nastaviť audio a video nastavenia.

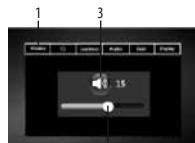


#### PRIESTOROVÝ ZVUK

1. zvolte menu PRIESTOROVÝ ZVUK
2. posuvníkom optimálne nastavte zvuk pre dané sedadlo vozidla



#### NASTAVENIE KVALITY OBRAZU

1. zvolte menu OBRAZOVKY
2. zvolte po jednom jednotlivé parametre
3. posuvníkom nastavte jednotlivé parametre podľa potreby

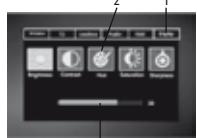

**VOLUME:** hlasitos / **EQ:** ekvalizér; Standard, Classic, Rock, Pop, Jazz, Electric, Custom (vlastné nastavenie) / **LOUDNESS:** fyziológický ekvalizér zap/vyp / **AUDIO:** TREBLE-BASS (vysoké a hlboké tóny) / **FIELD:** spoločná regulácia hlasitosti všetkých 4 reproduktorov (balance, fader) / **DISPLAY:** brightness, contrast, hue, saturation, sharpness (jas, kontrast, farebný odstín, sýtość farby, ostrosť)



AUDIO A VIDEO NASTAVENIA SÚ PRÍSTUPNÉ ALE ČEZ TÓTO KLÁVEŠOVÝ SKRATKU

- V menu **AUDIO** menu SETUP (nastavenia) je možnosť upraviť firemné nastavenie ekvalizéra podľa vlastných požiadaviek pomocou 10 pásmového grafického ekvalizéra.
- Pri vysokej hlasitosti nedozierajte príliš hlboké a nízke tóny, môže spôsobiť skreslenie zvuku!
- Funkcia EQ vymazá predstavene hlbokých a vysokých tónov a opáčne.

#### Fyziológický ekvalizér

Pri nižšej hlasitosti ľudské ucho je menej citливé na nízke a vysoké tóny. Zapnutím funkcie **LOUDNESS** sa tento jav pri nižšej hlasitosti koruje automatickým ekvalizérom. Pri vysokej hlasitosti sa ho odporúča vypnúť pre obmedzenie skresleného zvuku.

• V záujme kvalitatívnejšieho zvuku pred použitím tejto funkcie odporúčame EQ vypnúť (napr. STANDARD) a regulárny basový a vysoký nastaviť do polohy „0“.

• Čím výška je hlasitos, tým menej čítaví účinkov automatického ekvalizéra.

#### Klávesové skratky pre phodohné nastavenie

Pre rýchly prístup miestnych menu v závislosti na aktuálnom režime na homom alebo dolnom pruhu obrazovky sa zobrazia rôzne klávesové skratky. Niektoré funkcie:

1. ikona obrazovky vypina obrazovku. Pri otvorenom displeji sa tak môžeme vyhnúť rušivým svetlám pri nočnej jazde. Dotykom displeja na jeho strešnej polovici Časť sa znova zapne.
2. Výsledok popisaného menu nastavenia zvuku a obrazovky.
3. Funkcie bezdrôtového spojenia BT, spárovanie zariadenia, telefónny zoznam, zoznam volaní, vytáčanie, prehrávanie zvukových súborov.
4. Stránkovanie hlavného menu pre volbu funkcií.




A VIACNÁSOBNÝM STAČENÍM TLAČIDLA SA DÁ REGULOVAŤ JAS A VYPNÚŤ OBRAZOVKU.

DOTKNITE SA VYPNUTIE OBRAZOVKY KDEKOĽVEK A ZNOVU SA ZAPNE. POSLEDNÁ FUNKCIA V MENU „NASTAVENIA“ JE INDIVIDUÁLNE NASTAVENIE SVIETIVOSTI.

#### Základné nastavenie, volba jazyka

Stlačte tlačidlo **M/N** (7.) alebo ikonu **HOME** (domček) na displeji a v hlavnom menu dolava nalistujte menu **SETUP** (ozubené koliesko). Po úprave daného nastavenia sa dotknite pravého kraja zvoleného riadku.

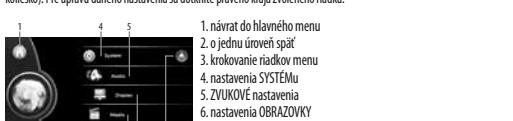

<b>SYSTEM</b>	geografická poloha používania / <b>jazyk menu</b> / zobrazenie loga výrobku (heslo: 6556) / predná kamera / zadná kamera / detekcia zapnutého svetliemetu (podsvietenie sa zapne spolu s osvetlením vozidlá) / detekcia parkovacej brzdy / výstup pre aktívny subwoofer / zvukovú signálizáciu dotyku
<b>AUDIO</b>	individuálne nastavenie ekvalizéra / nastavenie kanálov fávý-pravý a predný-zadný / LOUDNESS zap/vyp.
<b>DISPLAY</b>	jas, kvalita obrazu (zvoľte podľa okolitých svetelných podmienok) / nastavenie individuálnej (CUSTOM) kvality obrazu
<b>MEDIA</b>	pomer strán obrazu pri prehrávaní videa (4:3 Pan Scan alebo 16:9 Wide Screen)







# radio auto și player multimedia

Înainte de utilizarea produsului vă rugăm să citiți instrucțiunile de utilizare de mai jos, și să păstrați manualul de utilizare. Manualul original este în limba maghiară. Acest aparat nu este destinat utilizării de către persoane cu capacitate fizice, senzoriale sau mentale diminuate, ori de către persoane care nu au experiență sau cunoștințe suficiente (inclusiv copii); copiii peste 8 ani pot utiliza aparatul în cazul în care sunt supravegheata de către o persoană care răspunde de siguranță lor, sau sunt informați cu privire la funcționarea aparatului în condiții de siguranță și au înțelese ce periole pot rezulta din utilizarea necorespunzătoare. În cazul copiilor supravegheata este recomandată pentru a evita situația în care copiii se joacă cu aparatul. Curățarea sau utilizarea produsului de către copii este permisă numai cu supraveghearea unui adul. După despachetare, asigurați-vă că aparatul nu a fost deteriorat în timpul transportului. Înțejați copiii de distanța de ambalaj, în cazul în care acesta include punjă sau alte obiecte care pot fi periculoase!

## CARACTERISTICI PRINCIPALE

### OGNLINDIRE ECRAN IOS și ANDROID\*

### TOATE APLICATIILE TELEFONULUI SUNT VIZIBILE SI POT FI COMANDATE DE PE RADIODUL AUTOVEHICULULUI\*\*

- ecran tactil LCD fix 7,0" (18cm) - aparat cu dimensiune 2x DIN - lumină de fundal la butoane cu selecția colorurii RGB - conexiune BT fară fir - 2in1: microfon incorporat și extenție cu clemă - conboriere telefonică fară atingere a telefonului - amplificarea conborierii telefonice - listă contacte și de apeluri direct pe ecran - posibilitatea de conectare echipament USB/microSD - radio AM/FM cu memorie 30 posturi și funcții RDS - recepție posturi de informare din trafic - setări de ton avansate, unice - egalizator grafic cu 10 benzi - intrare pentru cameră frontală și de marsarier - funcție automată de camera marsarier (opțională SA 143) - posibilitatea de conectare monitor pentru pasagerii din spate - poate fi comandat de pe butoanele de volan - meniu în 5 limbi (EN/HU/SK/RO/SRB) - ieșire 4x50W boxe Hi-Fi - intrare AUX 3,5mm pentru echipamente portabile - ieșire RCA 2+1 pentru amplificator + boxă activă de joasă - intrare video RCA 2+1 și ieșire video RCA 1X

\*pentru telefoane iPhone 6-7-8 și Android 5.0 sau mai noi compatibile Mirror Link, Conectare prin cablu de date USB; în cazul Android-ului după instalarea unei aplicatii

\*\*iPhone: ecranare, Android: ecranare și comandă de pe ecranul radioului

## PUNEREA ÎN FUNCȚIE

Acest produs poate funcționa impreună cu smartphone-uri. Prin urmare, în pregătirea acestei descrierii, am presupus că utilizatorul dispune de cunoștințe generale despre utilizarea smartphone-urilor. Configurarea și utilizarea acestui radio este foarte similară cu utilizarea telefonelor și a tabletelor.

### Resetarea aparatului

Dacă dispozitivul funcționează defectuos (inclusiv ecranul), este necesară stergerea datelor de pe microprocesor și repornirea produsului. Pentru acesta, ca aparatul să revină la setările de bază din fabrică, apăsați cu agraful de birou îndreptată butonul RESET (10), aflat sub capacul de protecție. După ce s-a oprit, reporniți radioul (5).

### Pornire și oprire, blocare sunet

Putând aparatul prin apăsarea scurtă a butonului (5) **VOLUME**. Va porni ecranul și aparatul va comuta pe ultima funcție utilizată.  
 • Ulterior, după pornire, aparatul va comuta automat pe ultimul mod de funcționare utilizat, în cazul în care echipamentul extern conectat nu a fost îndepărtat.  
 • Având în vedere, că la pornirea motorului autovehiculului se pot crea scări de tensiune, porniți aparatul doar ca motorul autovehiculului să fie în funcțiune. Operațiunile se recomandă să se efectueze înainte de oprirea motorului autovehiculului. Pentru oprire în fine apăsați timp de 3 secunde butonul (5) **VOLUME**.  
 • Prin apăsarea scurtă a butonului (5), **VOLUME** puteți bloca și debloca sunetul din difuzoare (MUTE).

### Setare volum, ton și calitatea imaginii

Utilizați butonul **rotativ** pentru obținerea volumului dorit: **VOLUME 00 – 40**. Simultan, în rândul superior al ecranului vor apărea parametri disponibili (submeniuri volum, ton sau rezoluția imaginii). Atingeți pe ecran caracteristica pe care doriti să o setați și prin atingere butoanelor de pe ecran să puteți personaliza setările audio și video.

### SETARE VOLUM

1. Selectați meniul **VOLUM**
2. Mișcați butonul culisant, ținând degetul pe el
3. Atingeți pentru pornirea și oprirea difuzoarelor



### SUNETE PRESETATE

1. Selectați meniul **EQ**
2. Atingeți o setare
3. În meniu **SETARI** puteți crea un sunet unic



### REGLARE TON FIZIOLOGIC

1. Selectați meniul **LOUDNESS**
2. Atingeți comutatorul pentru pornire și oprire




### REGLARE TON

1. Selectați meniul pentru reglarea TON-ului
2. Mișcați butonul culisant la reglarea sunetelor înalte
3. Reglați și sunetele joase



### SETARE SURROUND

1. Selectați meniul **SURROUND**
2. Mișcați butonul culisant să optimizați sunetul pentru un anumit scaun din mașină

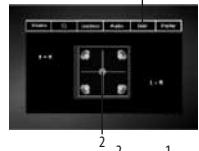

### SETAREA CALITĂȚII IMAGINIIL

1. Selectați meniul **ECRAN**
2. Selectați individual parametrii
3. Folosiți butonul culisant conform preferințelor



**VOLUME:** volum / **EQ:** setări de egalizator; Standard, Classic, Rock, Pop, Jazz, Electric, Custom (setare personalizată) / **LOUDNESS:** ton fiziological/pomăt / **AUDIO:** TREBLE-BASS (ton înalte/joase) / **FIELD:** control volum la cele 4 boxe consonante (balance, fader) / **DISPLAY:** brightness, contrast, hue, saturation, sharpness (luminositate, contrast, roțitură, saturare, claritate)

**SI CU ACEST BUTON DE ACES RAPID PUTEȚI AJUNGE LA SETĂRILE AUDIO SI VIDEO**

- În meniu **SETUP** (setări), submeniul **AUDIO** aveți posibilitatea de a modifica setările de ton din fabrică, după preferințele personale printru utilizarea unui regulator de ton cu 10 benzi.

- Atunci când ascultați aparatul la volum ridicat, nu accentuați în mod semnificativ sunetele de înalte și joase, deoarece se poate crea distorsionarea sunetului!

- Funcția **EQ** anulează setările anterioare de tonuri înalte și joase și invers.

### Reglare fizioligică a tonului

Urechea umană la un volum scăzut, sesizează mai puțin sunetele de frecvență înaltă și joasă. Prin activarea funcției **LOUDNESS** la un volum scăzut, acesta se poate corecta prin reglarea automată a tonului. La un volum mai mare recomandăm dezactivarea acestei funcții, pentru a preveni zgomotele distorsionare.

- Pentru a califica mai bună o sunetul, înainte de activarea acestei funcții recomandăm oprirea egalizatorului **EQ** (de ex. STANDARD) și **DISPLAY**.

- Cu cât volumul este mai mare, cu atât mai mult se va resimți efectul corecției automate a tonului.

### Taste rapide pentru setări usoare

În funcție de modul activ, în bară superioară sau inferioară a ecranului apar diverse butoane de acces rapid pentru a facilita accesarea meniurilor locale. Câteva funcții cheie:

1. Simbolul ecran oprește ecranul. Astfel lângă ecran deschis, puteți evita lumina deranjantă în timpul conducerii pe timp de noapte. Apăsați orizontal pe ecran pentru repornire.
2. Meniu setările audio și de imagine, detaliate mai sus.
3. Funcție conexiuni BT fară fir, dispozitivele asociate, agenda telefonică, lista de apeluri, apelarea, redarea muzicii.
4. Meniu principal cu răsfoire, pentru a selecta funcțiile.



**BUTON RAPID PENTRU REGLAREA LUMINOZITĂȚII, AFLAT LÂNGĂ BUTONUL DE PAS ÎNAPOL.**  
**LA APĂSAREA REPETATĂ SE POATE REGLA LUMINOZITATEA SAU OPRI ECRANUL.**  
 ECRANUL OPRIȚ SE POATE REPORNII DĂCA-1 ATINGEȚ ORIUNI.

ULTIMA FUNCȚIE ÎN MENIU „SETARI” ESTE LUMINOZITATEA PERSONALIZATĂ.

### Setări de bază, selecția limbii de utilizare

Apăsați butonul **M/N** (7.) sau atingeți pe ecran butonul principal, **HOME** (casă) și răsfoiți spre stânga în meniu principal, până ajungeți la butonul **SETUP** (rotativ). Pentru modificarea setărilor actuale atingeți marginea din dreapta a rândului selectat.



1. ieșire pt meniu principal
  2. păstreaza inapoi un nivel
  3. păstreaza rânduri meniu
  4. setari SISTEM
  5. setari VOCE
  6. setari ECRAN
  7. setari MEDIA
  8. setare conexiune BT
- Derulați în jos pentru a accesa următoarele elemente de meniu.







## auto radio i multimedijski plejer

Pre prve upotrebe radi bežbednog i tačnog rada pažljivo pročitajte i proučite ovo uputstvo. Sačuvajte uputstvo! Originalno uputstvo je pisano na mađarskom jeziku.

Ovaj uređaj nije predviđen za upotrebu licima sa smanjenom mentalnom ili psihofizičkom mogućnošću, odnosno neiskusnim licima uključujući i decu, deca starije od 8 godina smiju da rukaju ovim uređajem samo u prisustvu odrasle osobe ili da su upuceni u bežbedno rukovanje i svesni su svih opasnosti pri radu. Deca se ne smiju igратi sa ovim proizvodom. Korisničko državanje i čišćenje ovog prizvoda daca smiju da više samo u prisustvu odrasle osobe. Nakon raspakovanja uverite se da li se proizvod sljeduće nije oštećen u toku transporta. Decu držite dalje od ambalaže ako ona sadrži opasne predmete za decu kao što su folije itd.

### BITNJSKE OSOBINE

#### DELJENJE ANDROID I IOS displeja\*

#### SVE APLIKACIJE NA TELEFONU SU DOSTUPNE I NA AUTO RADU\*\*

- LCD displej na dodir 7,0" (18 cm) - dimenzija 2xDIN (duple DIN) - RGB promjenjiva boja svetlosti tastera - Radio/ muzički plejer / reprodukcija fotografija i video zapisu - Bežična BT veza - Žiđni: ugradeni mikrofon i spoljni mikrofon sa stipuljkom - Telefoniranje bez dodira telefona - Telefoniranje preko zvučnika - Telefonski meni i lista poziva na displeju - Čitač USB/microSD memorijskih kartica • 30 memorija za AM/FM radio sa svim RDS funkcijama • Primaњe informacija na putu - Napredno podešavanje zvuka - Grafičko podešavanje boje tona na 10 stepena - Ulaz za prednju i zadnju kamenu • Funkcija automatskog uključenja/rivkere kamere (opcija: SA 143)
- Mogućnost prikupljanja monitora za putnikove na zadnjem sedištu - Moguća kontrola sa pojedinim fabričkim daljinskim upravljačima sa volana - Meni na 5 jezicima (EN/HU/SK/RU/SRB) • 4 x 50 W Hi-Fi izlaz za zvučnike • 3,5mm AUX ulaz za prenosne uređaje - 2+1x RCA izlaz za pojačalo/sub bas kutiju • 2+1x RCA video ulaza i 1xRCA video izlaza

\* iPhone 6-7-8 i Android 5.0 ili novije telefone sa Mirror Link opcijom, nakon postavljanja aplikacije komunikacija se radi preko USB kabela

\*\*iPhone: deljenje, Android: deljenje i kontrola preko displeja auto radija

### PUSTANJE U RAD

Pošto je ovaj proizvod namenjen za komunikaciju sa pametnim telefonima i tablet računarima pretpostavljamo da korisnik ima osnovna znanja za upotrebu pametnih telefona i da sličnosti u radu omogućavaju korisniku jednostavnu upotrebu ovog auto radia.

### Postavljanje uređaja u osnovni položaj

Postavak devišanjem kad se prekine uključivanje uređaja ili u slučaju da displej uređaja nepravilno radi, potrebno je resetovati uređaj i obrisati podatke iz procesora. Resetovanje se radi upotrebom tankog predmeta kojim treba pritisnuti RESET (10.) taster koji se nalazi ispod prednjeg zaštitnog poklopa. Nako što se uređaj isključi, uključite ga ponovo (5.).

### Uključivanje zvuka, isključivanje zvuka

Uredaj se uključuje kratkim pritiskom (5.) VOLUME tastera koji služi i za pojačavanje zvuka. Uredaj će se uključiti i biće aktivna zadnje odabranja funkcija.

- Kroz pritisk srednjog uključujuće je aktivna zadnje odabranja funkcija, ali samo u službi da nije izveden ili odstranjen zadnje upotrebljeni uređaji.
- Zbog bezbednosnih razloga strujnih udara pri pokretanju motora, uređaj uključuje samo tek kada je motor pokrenut. Isključenje radiće pre nego što se motor automobila isključi. Za isključenje uređaja dželite pritisnuti 3 sekunde (5.) VOLUME.

• Kratkim pritiskom (5.), VOLUME se samo isključuje i uključuje zvučnici (MUTE).

### Podešavanje glasnoće, boje tona i kvalitet slike

Koristite rotirajuće dugme kako biste postavili željenu glasnoću: VOLUME 00 - 40. Istovremeno se na gornjem delu displeja može pratiti podešavanje aktuelne funkcije (jacina zvuka, boja tona i podmeni za kvalitet slike). Dodirujte željeni taster, potom dodirivanjem displeja možete po želji podesiti audio i video podešavanja.

### PODEŠAVANJE GLASNOĆE ZVUKA

1. odaberite meni za GLASNOĆI ZVUKA
2. dodirnite pomerajte skalu u željeni položaj
3. pritiskom ikonice zvučnika zvučnici se mogu uključiti i isključiti



### UNAPRED PODEŠENE BOJE TONA

1. odaberite EQ meni
2. dodirnite odaberite jednu od opcija
3. u PODEŠAVANJU odaberite željeni zvuk




### RUČNO PODEŠAVANJE TONA

1. odaberite LOUDNESS meni
2. dodirnite prekidač kojim možete uključiti ili isključiti funkciju



### PODEŠAVANJE BOJE TONA

1. odaberite meni za PODEŠAVANJE BOJE TONA
2. prstom pomerajte skalu i podesite visoke tone
3. podesite i niske tone

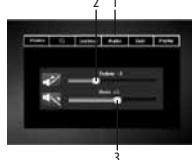


### PODEŠAVANJE SURROUND EFEKTA

1. odaberite SURROUND meni
2. dodimite displej i pomeranjem prsta odredite odnos jačine zvuka u odnosu na jedno sedište u vozilu



### PODEŠAVANJE KVALITETA SЛИKE

1. Odaberite meni za DISPLAY
2. Projedinačno odaberite jedan od parametara
3. dodimite displej i pomeranjem prsta po želji podesite odabrani parametar

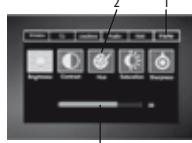

**VOLUME:** jačina zvuka / **EQ:** podešavanje boje tona; Standard, Classic, Rock, Pop, Jazz, Electric, Custom (sopstveno podešavanje) / **LOUDNESS:** fizikalni i isklj. niskih tonova / **AUDIO: TREBLE-BASS** (visoki i niski tonovi) / **FIELD:** istovremeno pojačavanje zvuka sva 4 zvučnika (balance, fader) / **DISPLAY:** brightness, contrast, hue, saturation, sharpness (jačina svetlosti, ostrina, boje, kontrast)

**X** OVIM BRZIM TASTEROM JEDNOSTAVNO I BRZO MOGU BITI DOSTUPNI MENUZA PODEŠAVANJE AUDIO I VIDEO PARAMETARA

- **SETUP** (podesavanje) menuju u **AUDIO** podmenju postoji mogućnost podešavanja boje tona sa **ekvajzerom od 10 kanala**.
- **Kod** glazbene muzike nemate preterati sa podešavanjima niskih i visokih tonova, to može da izazove izobiljevanja!
- **EQ** funkcija briše dotadšnja podešavanja niskih i visokih tonova, to važi i u obratnom smjeru.

### Fiziološko podešavanje boje tona

Ljudsko uho pri manjim snagama zvuka manje je osteljivo na niske i visoke tone. Upotrebom **LOUDNESS** funkcije pri manjim snagama ovaj efekat se automatski koristi. Pri većim snagama se ne prepričuje upotreba ove funkcije pošto dovodi do izobiljevanja zvuka.

- Radi bolje kvalitet zvuka preporučuje se da automatska podešavanja boje tona budu isključena **EQ** funkcije (primer STANDARD) niske i visoke tone postavite u „0“ polozaj.

- Što je snaga veća manje je efekat podešenje boje tona.

### Brzi taster za fikske i jednostavne podešavanje

U trenutku aktuelnom meniju sa gornje ili donje strane displeja postoje ikonice koje olakšavaju kretanje i podešavanje određenih funkcija. Neke izdvojene funkcije:

1. Simbol displeja isključuje displej. Ova mogućnost olakšava vožnju tokom noći, da je svjetlo displeja ne smeta u vožnji. Bilo gde da se dodim displej, displej će se ponovo uključiti.
2. Prethodno pomenuta funkcija podešavanja audio video parametara.
3. Dostupnost BT funkcije; upareni uređaji, telefonski imenik, lista poziva, poziv, reprodukcija muzike.
4. Glavni meni za odabir funkcija.



**POREKLO IKONIKE ZA POKRIVANJE NALAZI SE IKONICA ZA PODEŠAVANJE JAČINE SVETLОСТИ displeja**

**STISKANjem IKONIKE MOGUĆE JE PODESTI VIŠE JAČINA SVETLОСТИ I ISKLJUČITI displej.**

**BILO DA DO DODIRNETE ISKLJUČENI MONITOR ON ĆE SE ISKLJUČITI. ZADNJE DVE FUNKCIJE OMOGUĆAVAJU RUČNO PODEŠAVANJE JAČINE OSVETLJENJA KOJE SE OSVETLJENJA NAJVEĆE U MENUVU „PODEŠAVANJA“. ZADNJA FUNKCIJA JE DOSTUPNA SAMO AKO JE OMOGUĆENA I AKTIVIRANA DETEKCIJA UKLJUČENIH FAROVA.**

### Osnovna podešavanja, podešavanje jezika

Pritisnite taster **M/N** (7.) ili ikonicu **HOME** (kukica) na displeju **HOME** (ház) da bi bio dostupan glavni meni, listajte levo u glavnom meniju da bi bila dostupna opcija **SETUP** (upčapki). Za modifikaciju podešavanja određenog reda, dodirnite desni deo reda.

1. izlaz iz glavnog menja
2. korak nazad
3. korak između redova
4. SISTEMSKA podešavanja
5. podešavanje ZVIKA
6. podešavanje displeja
7. podešavanje MEDUE
8. podešavanje BT veze
- Idite prema dole za dostupnost ostalih podešavanja.







# A KÉSZÜLÉK ÁLTAL TÁMOGATOTT FÁJLFORMÁTUMOK / FILE FORMATS SUPPORTED BY THE DEVICE / PODPOROVANÉ FORMÁTY SÚBOROV / FORMATE DE FIŞIERE SUPORTATE DE APARAT / PODRŽANI FORMATI FAJLOVA / FORMATI DATOTEK KATERE PODPIRA NAPRAVA / PODPOROVANÉ FORMÁTY SOUBORŮ

AUDIO FORMAT	Profile	Max. Bitrate	Max. SampleRate
MP3	All	320 kbps	48000
WMA	Standard / Pro	384 kbps	48000
OGG	Q1 Q10	500 kbps	48000
FLAC	Lever0-Lever8	1,60 Mbps	48000
APE		950 kbps	48000
AAC		448 kbps	48000
AC3	Ac3 only	640 kbps	48000
DTS	Dts only	3,84 Mbps	48000

PHOTO FORMAT	Max. resolution	profile
JPEG	Unlimited	Baseline
BMP	2,5 M pixels	ALL
GIF	2,5 M pixels	89a / 87A
PNG	2,5 M pixels	ALL

VIDEO FORMAT	resolution	Video decode
MKV	1280 x 720	MPEG4 / XVID, DIVX4 / DIVX5 / MSMPEG4V3, MPEG2, RV1.0 / RV2.0 / RVG2, RV3.0 / RV4.0 / RV8
	720 x 480	H264 / AVC
	640 x 480	DIVX3
AVI	1280 x 720	MPEG4 / XVID, DIVX4 / DIVX5 / MSMPEG4V3, H263, MJPEG
	720 x 480	H264 / AVC
	640 x 480	DIVX3
MOV / MP4	1280 x 720	MPEG4 / XVID, DIVX4 / DIVX5 / MSMPEG4V3, MPEG2, MPEG1, H263, MJPEG
	720 x 480	H264 / AVC
	640 x 480	DIVX3
TS	1280 x 720	MPEG2
	720 x 480	H264 / AVC
ASF	1280 x 720	MPEG4 / XVID, DIVX4 / DIVX5 / MSMPEG4V3, MPEG2, MPEG1, H263, MJPEG
	720 x 480	H264 / AVC
	640 x 480	DIVX3
FLV	1280 x 720	H263
	720 x 480	H264 / AVC
PMP	1280 x 720	MPEG4 / XVID,
	720 x 480	H264 / AVC
RMVB	1280 x 720	RV1.0 / RV2.0 / RVG2, RV3.0 / RV4.0 / RV8 / RV9
MPG / VOB	1280 x 720	MPEG2, MPEG1,

- H**
- Támožatott video felirat fajlok: TXT, SRT, SSA, SUB
  - Nem támožatott vagy hibás fajlok esetben a „teves fajl” üzenet jelenik meg.
  - A támožatott fajlok lejátszása sem garantált minden esetben, mert azt befolyásolhatják a gyártótól független szoftveres és hardveres körülmenék.
  - Ideális esetben a beépített képernyő felbontásának megfelelő kép és video anyagok megjelenítése javasolt, bár ez általában nem követelmény. Esetenként szükség lehet konverzióra.
  - Nem javasolt indokolatlanul magy felbontási kép/video fajlok megnövelése vagy tárolása a csatlakoztatott adathordozón.
  - A különböző audio és video fajlok hangsereje között különbség lehet azok eltérő paramétereitől adódóan.

- EN**
- Supported video subtitle files: TXT, SRT, SSA, SUB
  - In case of not supported or wrong files „wrong file“ message will appear.
  - Playing of supported files is not granted in all cases, since hardware and software conditions of the manufacturer can influence it.
  - In ideal cases displaying of such photos and video materials is recommended which have such resolution that meets the resolution of the screen, although it is not a requirement generally. Occasionally conversion may need.
  - It is not recommended to play or store such files on the data storage which has unreasonably high resolution.
  - Due the different parameters of audio and video files, the might have different volume.

- SK**
- Podporované formáty tituliek video: TXT, SRT, SSA, SUB
  - V prípade nepodporovaného alebo porušeného súboru sa zobrazí napís „chybný súbor“.
  - Nie je garantované prehranie ani podporovaných súborov, to môžu ovplyvniť softvérové a hardvérové podmienky, nezávisiť od výrobcu.
  - V štandardnom prípade sa odporúča zobrazenie foto a video materiálov s rozlíšením rovnajúcim sa s rozlíšením zazobudovaného displeja, ale nie je podmienkou. V niektorých prípadoch bude nevhodné ich konvertovať.
  - Neodporúčame sa odtrávanie a ukladanie na pamäťové médium foto/video súborov s neprimarene vysokym rozlíšením.
  - Rozdiel hlasitosti jednotlivých audio a video súborov môže byť z dôvodu ich rozdielnych parametrov.

- RO**
- Tipuri de fișiere video suportate: TXT, SRT, SSA, SUB
  - În cazul unor fișiere care nu sunt suportate sau sunt defecte, pe ecran va apărea mesajul „fișier greșit“.
  - Nu garantăm redarea tuturor fișierelor care sunt în lista de fișiere suportate, deoarece acestea sunt influențate de împrejurări legate de software sau hardware, independente de producătorul aparatului.
  - În caz ideal, se recomandă redarea unor fișiere de tip fotografii sau video, care au rezoluția ideală cea a ecranului încorporat, dar care nu este o cerere obligatorie. În unele cazuri poate fi necesară convertirea fișierelor.
  - Nu recomandăm deschiderea sau stocarea unor fișiere de tip foto sau video cu o rezoluție mare pe suportul de memorie.
  - Poate fi o diferență între intensitatea sonoră a unor fișiere audio sau video, datorită parametrilor diferenți ale acestora.

## SRB-MNE


- Podržani formati prevoda: TXT, SRT, SSA, SUB
- U sučaju da fajl nije podržan, pojavljuje se „wrong file“ poruka.
- Reprodukcijski podržani formata fajlova nije zagranjivana u svakom slučaju, hardverski i softverski uslovi proizvođača mogu uticati na reprodukciju.
- U idealnim slučajevima preporučuje se reprodukcija video sadržaja i fotografija u rezoluciji identičnoj rezoluciji displeja. Ponekad je konverzija sadržaja neophodna.
- Nije preporučljivo čuvanje ili reprodukcija fajlova sa previlejim rezolucijom.
- S obzirom na različite parametre audio i video sadržaja, moguće je pojava različite jačine zvuka.

## SLO

- Podpirani formati titlov: TXT, SRT, SSA, SUB
- V primeru nepodpiranja določenih map se pojavi ispis „napačna mapa“.
- Ni zagotovljeno niti predviđanje podprtih map , na predviđanje vplivajo softverske in hardverske rešitve nepredvidene s strani pravzapravleg naprav .
- V določenih pogojih , ne glede na resolucijo vgrajenega monitorja, se bo posnetek predvajal , vendar v posameznih primerih bo potrebna konverzija.
- Ne priporočamo prevajanje ali skladitev posnetkov s preveliko rezolucijo.
- Razni video in avdio posnetki lahko imajo različno moč in kvaliteto zvoka.


## CZ

- Podporované formáty video popisků: TXT, SRT, SSA, SUB
- V případě nepodporovaného nebo poškozeného souboru bude vyobrazena zpráva „chybný soubor“.
- Ani přehrávání podporovaných souborů není zaručeno v všech případech, protože proces přehrávání může být ovlivněn podmínkami software a hardware nezávislé na výrobci.
- V ideálním případě se doporučuje přehrávat fotografie a videozáznamy v rozlišení odpovídajícím rozlišení zazobudované obrazovky, přestože to není standardní požadavek. V některých případech je možné, že bude nutné soubory konvertovat.
- Nedoporučuje se otevírat, nebo na vkládaný datový zdroj uladit soubory obsahující fotografie nebo videozáznamy s neodůvodněně vysokým rozlišením.
- A hlasitostu různých audio a video souborů může být značně rozdíl, a to z důvodu odlišných parametrů těchto souborů.

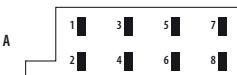

#### POWER CONNECTION FOR THE BLACK ISO PLUG

- A/1. No connection
- A/2. No connection
- A/3. No connection
- A/4. Battery direct connection for memory, +12V (yellow)
- A/5. Remote only for motor car antenne or amplifier REM, +12V (blue)
- A/6. No connection
- A/7. Ignition switch, +12V (red)
- A/8. Battery / Chassis GND (black)

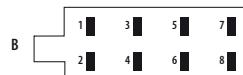

#### CONNECTION OF 4 SPEAKERS FOR THE BROWN ISO PLUG

- B/1. Speaker Out Right Rear + (purple)
- B/2. Speaker Out Right Rear - (purple-black)
- B/3. Speaker Out Left Rear + (grey)
- B/4. Speaker Out Left Rear - (grey-black)
- B/5. Speaker Out Left Front + (white)
- B/6. Speaker Out Left Front - (white-black)
- B/7. Speaker Out Right Front + (green)
- B/8. Speaker Out Right Front - (green-black)

Do not connect any speaker cable to the GND of the car or the battery (with the black cable or chassis)!

AUDIO	VIDEO	POWER	
AUX IN – R	red	V IN	yellow
AUX IN – L	white	FRONT CAM	yellow
AUX STEREO	3,5 mm	REAR CAM	yellow
R OUT	red	V OUT-1	yellow
LOUT	white	V OUT-2	yellow
		S.WHEEL GND	brown
		BACK CAM CONTROL +12 V	pink
		S.WHEEL CTRL1	grey
		S.WHEEL CTRL2	green
		AUTO BACKLIGHT +12V	black
			orange

#### TUNER

- FM/AM freq. range 87,5-108,0 MHz / 522-1620 kHz
- FM/AM preset 18 x FM / 12 x AM
- Usable sensitivity 1,6 µV
- Channel separation > 30 dB
- Signal/noise level > 60 dB

#### USB/microSD

- USB system USB 2.0
- Max. current 1000 mA
- File system FAT 16/32, max. 32 GB
- MP3 decoder MPEG-1/2 AUDIO Layer-3
- Number of channels 2-CH, stereo
- Channel separation > 76 dB
- Signal/noise level > 86 dB

#### GENERAL PARAMETERS

- Car Voltage system 12 Volt Negative GND chassis
- Operation Voltage 13,8 V DC (9 -16 V)
- Type of display (16:9) 7" / 800x480 / TFT LCD
- Video systems PAL / NTSC
- BT version V2.1 + EDR / 5.0 m
- BT profiles A2DP, V1.2, AVRCP, V1.4
- Channels of amplifier 4 CH
- Power output 4 x 50 W max.
- Speaker impedance 4 – 8 Ohm
- Channel separation > 80 dB
- Signal/noise level > 85 dB
- Frequency range 20 - 20.000 Hz
- Bass control ± 8 dB / 100 Hz
- Treble control ± 8 dB / 10 kHz
- Pre-amp output 2,0 Vrms max. (± 3 dB)
- Video output 1,0 Vp-p (75 Ohm)
- Fuse F15A
- T operation 0 °C ... +40 °C
- Weight 0,78 kg
- Chassis dimensions 178 x 101 x 70 mm / 2xDIN

**Vehicle multimedia  
entertainment APP  
Autolink**

SunMedia Technology co.,Ltd

GET IT ON  
**Google Play**



**„AMAZON” WEB LINK**

<https://s3-ap-southeast-1.amazonaws.com/productscenter/release/venus/bootes/common/Autolink.apk>  
[http://www.autolink.site:8080/jeesite//static/apk/Autolink\\_basic.apk](http://www.autolink.site:8080/jeesite//static/apk/Autolink_basic.apk)

**„GOOGLE” PLAY STORE**

<https://play.google.com/store/apps/details?id=com.link.autolink>

Gyártó: **SOMOGYI ELEKTRONIC®**  
 H – 9027 • Győr, Gesztenyefa út 3. • [www.somogyi.hu](http://www.somogyi.hu)  
 Származási hely: Kína

Distribútor: **SOMOGYI ELEKTRONIC SLOVENSKO s.r.o.**  
 Gútsky rad 3, 945 01 Komárno, SK • Tel.: +421/01 35 7902400 • [www.somogyi.sk](http://www.somogyi.sk)  
 Krajina pôvodu: Čína

Distributor: **S.C. SOMOGYI ELEKTRONIC S.R.L.**  
 J12/2014/13.06.2006 C.U.I.: RO 18761195  
 Cluj-Napoca, județul Cluj, România, Str. Prof. Dr. Gheorghe Marinescu, nr. 2, Cod poștal: 400337  
 Tel.: +40 264 406 488, Fax: +40 264 406 489 • [www.somogyi.ro](http://www.somogyi.ro)  
 Ţara de origine: China

Uvoznik za SRB: **ELEMENTA d.o.o.**  
 Jovana Mikića 56, 24000 Subotica, Srbija • Tel.: +381(0)24 686 270 • [www.elementa.rs](http://www.elementa.rs)  
 Zemlja uvoza: Mađarska • Zemlja porekla: Kína • Proizvođač: Somogyi Elektronik Kft.

**DC 12 Volt**



**RoHS  
COMPLIANT**

**e13  
0312519**

